

WATCHWINDER “WS01”

INSTRUCTIONS MANUAL

(ENG)

To enable smooth and proper operations, please carefully read and preciously keep this notice for future perusal.



This INSTRUCTION MANUAL is available in different languages.
Check online LEANSCHI.com/ DOWNLOADS for further languages & updates.

Thank you for having purchased this LEANSCHI product!

It is guaranteed for 3 years from the date of purchase.

It has been carefully manufactured for enabling a proper storage for your finest timepieces, insuring their full functionality and your own full satisfaction.

BOOST and ***SLEEP*** functions are advanced and specific features you will find built-in some LEANSCHI watchwinders. Make sure you properly use them to avoid troubleshooting.

Our team and/or our official retailers remain at your disposal in case of questions or remarks related to this device's operations.

www.leanschi.com

 
POWER ADAPTOR:	IN: 100-240V – OUT: 3V, 1,2A
BATTERIES	2x ALCALINE “AA” - LR06
ADJUSTABLE NUMBER of ROTATIONS per DAY (TPD=Turns Per Day):	650 – 800 - 1.000 - 1.900 or “BOOST”
BOOST FUNCTION:	YES
DIRECTION SELECTION:	clockwise, anti-clockwise, both directions
MATERIAL: (depending on version)	MDF-wood frame EXTERIOR: PU-leather lacquered wood INTERIOR: PU-leather rubber lacquered wood
MOTOR:	Quality & silent Japanese motor (MABUCHI)
OPERATING TEMPERATURE:	-20°C – 50°C

Last Update: 2017


WATCH-TEAR and FATIGUE

Our device has been specially conceived to take great care of your watches. Therefore, it will gently rotate the desired TPD and stop in-between. The effective time of winding is much shorter than the rest-time granted to your watch to avoid unnecessary movement and components fatigue.

FRONT

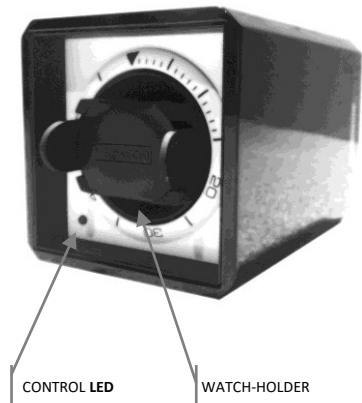


BACK

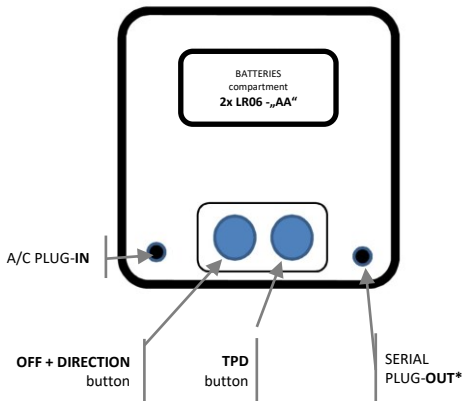 

** serial plug to link up to 3 winders to a single A/C adaptor*

REMOVING / PUTTING your WATCH onto the WATCHWINDER

 To REMOVE the **watch-holder** from the watchwinder, firmly **PRESS** on both watchholder's ears and **PULL** out of the winder-barrel.

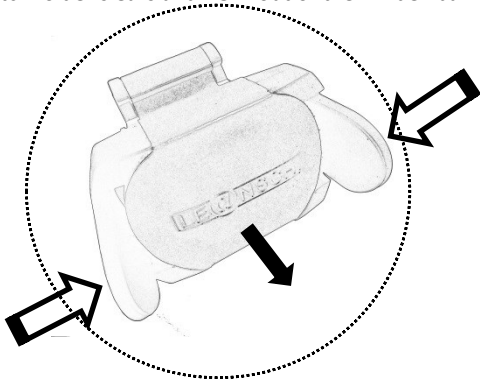

To **PLUG** the watch-holder back into its barrel, firmly **PRESS** on both holder's ears and gently **PLUG-IN** the holder into the 2 sides-holes on the winder's barrel.

IMPORTANT NOTES

- Only use the A/C adaptor which has been delivered with your watchwinder.
- Never open or dismantle the winder nor unscrew its body or case.
- Always STOP the winder before you remove / insert a watch.

Beware:

The non-observance of those recommendations may lead to guarantee cancellation.

FURTHER RECOMMENDATIONS

- Do not expose your watchwinder to direct sun-rays
- Do not locate it close to a source of heat (It may not only damage your device; it is a source of hazard for your valuable timepieces too).
- Do not place your watchwinder close to a source of magnetism (avoid TV-sets, monitors, loudspeakers and so on...)
- Never dispose your device with the regular waste. It can possibly be repaired.
- If you have to dispose it, strictly stick to disposal regulations for electronic devices in force in your country.

OPERATIONS | How to set my winder ?

- 1) Plug-In the A/C adapter to the watchwinder and to a A/C-plug OR insert the batteries in the batteries-compartment (If you choose to supply your watchwinder through A/C and A/C-supply, we recommend to REMOVE the batteries).
- 2) SELECT the cycle best suitable for your timepiece. The “TPD” (Turns-Per-Day) button ❷ is located on the watchwinder ‘s back: 650, 800, 1.000, 1.950 TPD or BOOST-function.
- 3) SWITCH-ON the main SWITCH / “DIRECTION” button ❶, and select the WINDING motion: CLOCK-WISE, ANTI-CLOCKWISE or BOTH DIRECTIONS
- 4) Using our optional CONNECTING CABLE, you can link a 2nd winder (plug “IN”) with your MAIN winder (plug “OUT”), using a single A/C adaptor for up to 3 watchwinders “WS01”.

SLEEP FUNCTION

12 hours after it has started operation, your winder will stop for the consecutive next 12 hours (i.e. night sleep).

Programming your winder just before 9 o' clock in the morning would make it stop during the night from 21:00 onward to 9:00 on the next day. This function is useful to keep your watchwinder noiseless during the night if you have it in your bedroom.

BOOST FUNCTION - BOOST TPD

For automatic watches which may have stopped due to empty power-reserve, selecting the "BOOST" setting will rotate your watch continuously for one hour... before switching then automatically to 1.000 TPD mode.

24hrs after the boost function has been set, you should re-adjust your winder settings in accordance with your watch requirements. We recommend however to always wind-up a bit your watch manually before putting it on its winder.

EOL (End-Of-Life) FUNCTION *(for batteries-powered watchwinders only)*

When batteries get weak and need replacement, the build-in GREEN LED is blinking twice every 2 seconds. In such a case, change the batteries within 1 month.

OPERATING MODES

“TPD” = **Turns Per Day** or the number of full rotations within a day (24 hours).

TPD **650**

Winder is rotating for 1 minute and rest for 472 seconds before re-starting the same cycle

TPD **800**

Winder is rotating for 1 minute and rest for 347 seconds before re-starting the same cycle

TPD **1000**

Winder is rotating for 1 minute and rest for 286 seconds before re-starting the same cycle

TPD **1950**

Winder is rotating for 1 minute and rest for 117 seconds before re-starting the same cycle

TPD “**BOOST**”

(available on some winders)

Winder is rotating continuously for 1 hour and returns to TPD **1000** right after

To be used for watches which power-reserve was completely exhausted and had stopped as a consequence.

TROUBLES SHOOTING

There is no motion on my winder

1. Check if you correctly plugged the A/C cable and adaptor.
2. If no A/C-adaptor cable has been plugged-in, make sure your batteries are OK and correctly placed in their compartment.
3. Check if your DIRECTION-button ❶ has been switched ON; respectively if you chose a TPD-program.
4. Switch-OFF the DIRECTION-button ❶ before re-selecting your program / cycle: the winder should start.
5. Make sure your winder is not in the SLEEP-phase.

Your watch stops despite the winder's rotations

1. Raise the number of TPD
2. Check with the watch-manufacturer if the watch's oscillating mass is winding up the watch CLOCKWISE, ANTICLOCKWISE or in both DIRECTIONS. Adapt your settings in accordance.
3. Wind-up 10-20 times your watch crown before you put it on your watchwinder

**For any further troubles, never hesitate to ask our authorized LEANSCHI retailer.
Check the nearest retailer's location under [leanschi.com](https://www.leanschi.com)**

For our ENVIRONMENT sake, never dispose old batteries in the regular waste-bin. Bring them back to a suitable batteries disposal & recycling centre.

INTERNATIONAL GUARANTEE CARD - 3 years

This product has been designed
and produced with great care to last
and resist time & wear.

If it does not meet your expectations
for any quality reason, pls make use
of this guarantee.
YOUR SATISFACTION IS OURS

www.leanschi.com

Product Reference

Date of Purchase

official Retailer's stamp & signature